
1/5

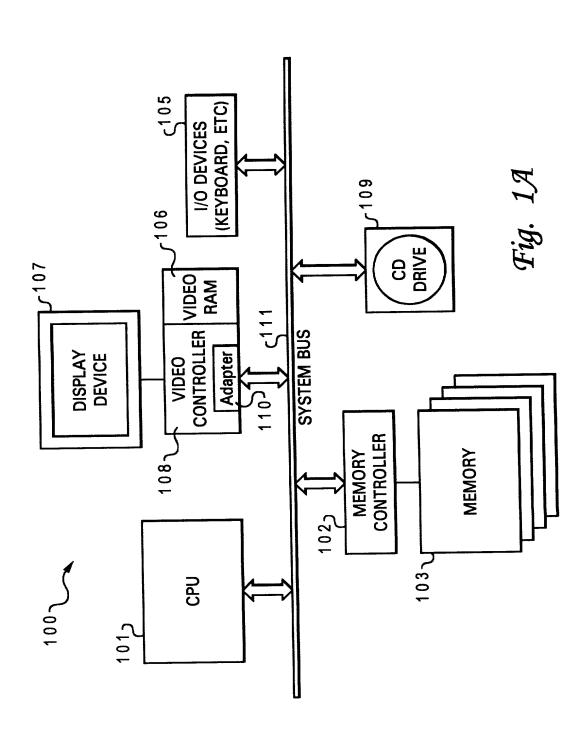



2/5

TECHNOLOGY CENTER 2800

					15 ح		
	BOOT CD ROM						
-	Sector	Sector	Sector	Sector	Sector		
	воот	BOOT	XF86Config.S1	XF86_VGA1			
	CODE	CODE	XF86Config.S2	XF86_VGA2			
	-symlink file	-config	XF86Config.S3	XF86_FBD1			
	•	symlink file	XF86Config.Y	XF86_VGA1			
			•	•			
			•	•			
	<i>i</i>		XF86Config.Z	XF86_VGA1			
	151	153 1	155 1	57)			

Fig. 1B

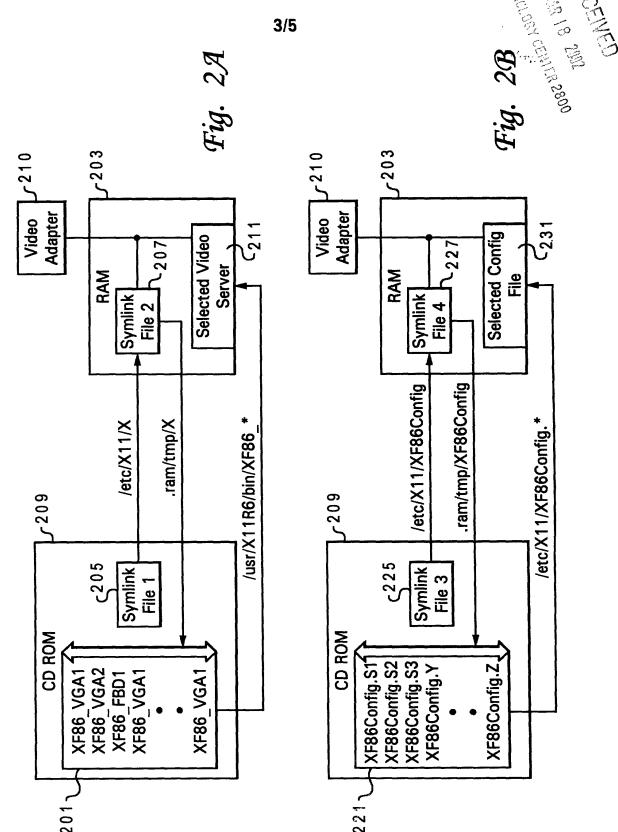

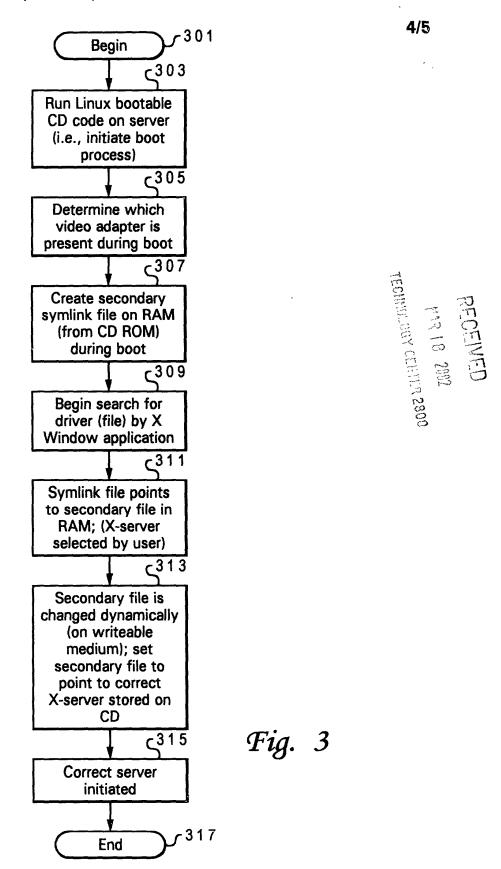

5/5

